



Originale	Sostituto
Standby	Power
Rec PVR	Display / Media
List PVR	Smart / List
Mute	Mute / Dimmer
EPG	Guide / EPG / -/-
Info	Info / Angle
TTX	Text / Goto
Audio	Audio / Lang I/II
Timer	Sleep / Timer
Subtitle	Subtitle / EQ
Menu	Menu / Home
CH+	CH+ / Page+
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
Vol-	Vol-
OK	OK

Originale	Sostituto
Right	Right
Vol+	Vol+
Favourite	Fav / Marker / PC
CH-	CH- / Page-
Down	Down
Tv/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Goto	Shift + Text /
7	7
8	8
9	9





Originale	Sostituto
0	0
REV	<< / Tune-
FWD	>> / Tune+
PREV	I<< / Preset-
NEXT	>>I / Preset+
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
AD	SHIFT + LANG I/II Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originale	Sostituto

