







































 



Originale	Sostituto
 Power	 Power
 TV/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Index	 Info / Angle
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Eject / Surround
 Media	 Shift + Display / Media
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Auto	 Smart / List
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Audio	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer





Originale		Sostituto		Originale		Sostituto	
	CH+		CH+ / Page+		P.Mode		Picture / Format
	Vol-		Vol-		S.Mode		Sound / Title
	Display		Display / Media				
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	-/--		Guide / EPG / -/--				
	0		0				
	Recall		Back / Return				
	Source		AV / Input / RDS				

