







 

 
 

 






 






 



 













 









 
 





 






Originale	Sostituto
 Power	 Power
 Eject / Open/Close	 Eject
 DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Program	 Sleep
 Audio	 Dual
 Zoom	 Shift + Eject

Originale	Sostituto
 Angle	 Format
 Subtitle	 Subt
 Title	 Media
 Marker	 Pre Ch
 Search	 TV/R
 Display / CLK/CNT	 Info
 i / Setup	 Options
 Up	 Up
 Left	 Left
 OK / Select / Enter	 Ok
 Right	 Right
 Down	 Down
 Disc Menu	 D. Menu
 Disc Menu	 Menu
 Return	 Back
 Stop	 Stop
 Pause / Step	 Pause




**Originale**
**Sostituto**

	Play		Play
	I<< Backward		I<<
	>>I Forward		>>I
	A-B / LP		Red
	Repeat / ez		Text
	Random / CM Skip		Green

**Originale**
**Sostituto**