



Originale	Sostituto
Power	Power
Input	Source
APA	Mode
Eco Mode	Aspect Eco Eco / Aspect
Menu	Menu
Reset	Shift + Power
Up	Up
Left	Left
Enter	Enter
Right	Right
Down	Down
Return	Auto
Aspect	Shift + Aspect Eco / Aspect
Keystone	Shift + Down
Keystone	Shift + Up
Pattern	Video Comp Comp / Video
D Zoom+	Play + / Play

Originale	Sostituto
D Zoom-	Stop - / Stop
Vol+	Page Vol Vol + / Page +
Vol-	Page Vol Vol - / Page -
Freeze	Timer Freeze Freeze / Timer
Blank	Mute Blank Blank / Mute
Muting	Shift + Mute Blank Blank / Mute

