


 



 

 














 

 
 





 



 

 

 

 


 




 

 





 

 

 






	Originale	Sostituto	Originale	Sostituto
	 Power	 Power	 0	 0
	 P/N	 Smart	 10+	 Guide
	 Audio	 Dual	 Zoom	 Shift + Eject
	 Eject	 Eject	 Setup	 Options
	 Prog	 Sleep	 V-Mode	 Format
	 Search	 TV/R	 OSD	 Media
	 Subtitle	 Subt	 Repeat	 Text
	 Angle	 Red	 Title	 Info
	 1	 1	 PBC/Menu	 Menu
	 2	 2	 Up	 Up
	 3	 3	 Down	 Down
	 4	 4	 Right	 Right
	 5	 5	 Left	 Left
	 6	 6	 Enter	 Ok
	 7	 7	 Stop	 Stop
	 8	 8	 Play	 Play
	 9	 9	 Pause	 Pause



