

 



 





 
 
 

 






 
 

 





 


 


Originale	Sostituto
On	Power
Off	+  Shift + Power
Mute	Mute / Dimmer
AVR	+  Shift + AV / Input / RDS
DVD	+  Shift + 2
> DVD	+  Shift + >> /
VID1	Smart / List
HDMI1	+  Shift + 1
Tape	+  Shift + 5
CD	+  Shift + 3
VID2	Display / Media
HDMI2	+  Shift + 6
AUX	+  Shift + 7
HDMI4	+  Shift + 4
HDMI3	+  Shift + 8
Sleep	Sleep / Timer
Preset ▲	CH+ / Page+

Originale	Sostituto
Test	+  Shift + Text /
AM/FM	TV/Radio /
Vol+	Vol+
Preset ▼	CH- / Page-
OSD	+  Shift + Smart / List
Vol-	Vol-
CH./[≡?]	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Prev. CH.	Exit / Cancel / Clear
1	1
2	2






































 
Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[≡+]	 Shift + CH+ /
 9	 9
 0	 0
 Mem/[≡◇]	 D.Menu / Top
 Tuning ▲	 Shift + Up
 Red	 Red / Netflix / Search
 Direct/Green	 Green / APP / Repeat
 Clear/Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Tuning ▼	 Shift + Down
 Tone	 Sound / Title

Originale	Sostituto
 RDS	 AV / Input / RDS
 Night	 Shift + Sleep / Timer
 <</Skip Down	 << / Preset-
 Skip Up/>>	 >>  / Preset+
 [≡]	 Text / Goto
 << DVD	 << / Tune-
 >> DVD	 >> / Tune+
 Stop DVD	 Stop / Hold
 Pause DVD	 Pause / Step / Freeze







 


Originale	Sostituto	Originale	Sostituto
Power On		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Night		Sleep / Timer	
Direct		D.Menu / Top	
[≡]		Text / Goto	
RDS		AV / Input / RDS	
SPKR/Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	

Originale	Sostituto	Originale	Sostituto
Clear		Exit / Cancel / Clear	
Down		Down	
Vol+		Vol+	
Mem/[≡◇]		Smart / List	
Vol-		Vol-	
CH./[≡?]		Display / Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Power Off	 + 	Shift + Power	





Originale	Sostituto	
Tun-M/[≡+]		Shift + << /
Digital/[≡X]		Shift + D.Menu / Top Menu
Preset ▲		Shift + Up
Delay/Prev.CH.		Shift + Exit / Cancel / Clear
Preset ▼		Shift + Down
















Originale	Sostituto












 




Mandis

Mandis



Originale	Sostituto	
Power On		Power
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec VCR		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Power (On /Off)		Eject / Surround
Direct		D.Menu / Top
RDS		AV / Input / RDS
SPKR/Menu		Menu / Home
Delay/Prev. CH		Exit / Cancel / Clear
Vol+ VCR		Vol+
Mem/[≡◆]		Smart / List
PR+ VCR		CH+ / Page+

Originale	Sostituto	
Vol- VCR		Vol-
PR- VCR		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Preset ▲/Blue		Blue / Prime Video / Random
Power Off		Shift + Power
Play VCR		Shift + Play /
Stop VCR		Shift + Stop /
<< VCR		Shift + << /










 
 


 
Tune-





**Originale**

**Sostituto**





>> VCR	 + 	Shift + >> /
Clear VCR	 + 	Shift + Exit / Cancel / Clear
Tun-M/[≡+]	 + 	Shift + CH+ /
1 VCR	 + 	Shift + 1
2 VCR	 + 	Shift + 2
3 VCR	 + 	Shift + 3
4 VCR	 + 	Shift + 4
5 VCR	 + 	Shift + 5
6 VCR	 + 	Shift + 6
7 VCR	 + 	Shift + 7
8 VCR	 + 	Shift + 8
9 VCR	 + 	Shift + 9
0 VCR	 + 	Shift + 0

**Originale**

**Sostituto**






Originale	Sostituto	Originale	Sostituto
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<<	 << / Tune-		
>>	 >> / Tune+		
<>	 OK		

