

 



 



 









 
 

 




 







Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Back	 Back
Mute	 Mute	Volume+	 Vol +
Update	 D. Menu	Chan.Up	 Ch +
Reveal	 List	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Stop	 Stop	2	 2
Info	 Info	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide
Menu Off	 Exit	0/10	 0
Menu Down	 Down	Red	 Red



Originale	Sostituto	Originale	Sostituto
Green	 Green		
Yellow	 Yellow		
Level R/Woofers	 +  Shift + Right		
Level L	 +  Shift + Left		
Tone-	 +  Shift + Ch -		
Mix Scan	 3D		
Surround	 Dual		
Blue	 Blue		
Nicam/Mono	 +  Shift + Dual		
Store Text	 +  Shift + Text		
Tone+	 +  Shift + Ch +		

