 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 PR List	 Smart / List	 Aspect	 Shift + Picture / Format
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Info/Display	 Info / Angle
 Vol+	 Vol+	 I/II/Nicam	 Shift + Audio / Lang I/II
 P.Mode	 Picture / Format	 DVD/USB	 Shift + 2
 S.Mode	 Sound / Title	 Text	 Text / Goto



