


 





 






 


 
 


 









 
 
 




 

 







 

 


 




 



 
 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		P-		Ch -
	TV / DTV		Smart		AV		AV
	Guide		Guide		Mute		Mute
	Up		Up		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3
	Menu		Menu		4		4
	Back		Back		5		5
	Zoom		Eject		6		6
	O↔O		Shift + Dual		7		7
	Red		Red		8		8
	Green		Green		9		9
	Yellow		Yellow		0		0
	Blue		Blue		( i )		Info
	P+		Ch +		[ ≡ ]		Text





Originale	Sostituto	Originale	Sostituto
 [=i]	 Shift + Info		
 [ ↓ ]	 3D		
 [ ? ]	 Media		
 [ □ ]	 Stop		
 TV / Radio	 TV/R		
 I / II	 Dual		
 [ ⊕ ]	 Shift + Subt		
 [ ... ]	 Subt		

Originale	Sostituto	Originale	Sostituto

