
 
 
 

 





 



 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 Last	 Back
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / Sub	 Green

Originale	Sostituto
 Green / Sub	 Subt
 Yellow	 Yellow
 Blue	 Blue
 Vol-	 Vol -
 Vol+	 Vol +
 Info	 Info
 Exit	 Exit
 EPG	 Guide
 Smart	 Smart
 File	 Media
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 TTX	 Text





Originale	Sostituto
	Options
	Play
	Stop
	Rec
	Pause
	Shift + 1
	Shift + 2

Originale	Sostituto

