





Originale	Sostituto
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
---/	GUIDE Guide
Preview	PRE-CH Pre Ch
Sound	SOUND DUAL Dual
Picture	SHIFT + PICTURE FORMAT Shift + Format
Aspect	PICTURE FORMAT Format

Originale	Sostituto
Still	Pause
S.Mode	SHIFT + SOUND DUAL Shift + Dual
Sleep	PROG SLEEP Sleep
Volume+	+ VOL Vol +
Volume-	VOL - Vol -
Channel+	+ CH Ch +
Channel-	CH - Ch -
PIP On/Off	HOME SMART Smart
Source	SHIFT + TIMER AV Shift + AV
Size	ZOOM Eject
Swap	RETURN BACK Back
Up / P-CH +	Up
Down / P-CH -	Down
Right	Right
Left	Left
Menu	TOP MENU MENU Menu
Menu	OK Ok





Originale	Sostituto
 Exit	 Exit
 TV / AV	 AV
 Info	 Info
 Wiper	 Media
 PC Auto	 Options
 TTX On/Off	 Text
 TTX / Mix	 Shift + Text
 Index	 Shift + Info
 List / FLOF	 Shift + Smart
 Store	 TV/R
 Hold	 Stop
 Reveal	 Shift + Subt
 Subpage	 Subt
 Size	 Shift + Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Originale	Sostituto
 Blue	 Blue

