 
 



 
 


 

 
 
 


 

 





Originale	Sostituto
 Standby - On	 Power
 Rec	 Shift + Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back
 T/C	 Text
 CH+	 Ch +
 CH-	 Ch -
 Volume+	 Vol +

Originale	Sostituto
 Volume-	 Vol -
 HDD	 Red
 DVD	 Green
 TUNER	 Yellow
 DV	 Blue
 Select	 Media
 TV/DVD	 Smart
 Source	 AV
 DVD Rec	 Rec
 I<< Prev	 I<<
 I<< Prev	 <<
 >>I Next	 >>I
 >>I Next	 >>
 Shuffle	 TV/R
 Zoom	 Eject
 Stop	 Stop
 Play	 Play






 
Originale		Sostituto	
	Pause		Pause
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Timer	+	Shift + AV
	Setup		Options

Originale		Sostituto	






 

 

 
 


 



 

 


 

 

 
Originale	Sostituto	
On/Off		Power
Prev		Ch -
Slow Down		Shift + Left
Next		Ch +
Audio Off		Mute
Title		List
Slow Up		Shift + Right
Subt.		Subt
Auto/Track		Shift + 3D
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
Repeat/1/All		Text
Menu Up		Up
Pause		Pause
Zoom		Eject
DVD/TV		Smart

Originale	Sostituto	
Menu Left		Left
OK Enter		Ok
Return		Back
Menu Right		Right
Progr.		Sleep
Display		Shift + Info
Menu Down		Down
Volume+		Vol +
Next		>>
Top Menu		D. Menu
Volume-		Vol -
1		1
Prev.		<<
2		2
Syst.Preset		Exit
3		3
4		4





Originale	Sostituto	Sostituto
5		5
Digest	 + 	Shift + List
6		6
Auto Scan	 + 	Shift + Options
Remain	 + 	Shift + Smart
7		7
Timer	 + 	Shift + AV
Angle		Format
Pbc		Yellow
Random	 + 	Shift + TV/R
Shuffle	 + 	Shift + D. Menu
Key-	 + 	Shift + Down
8		8
9		9
Setup		Options
Mode	 + 	Shift + Media
Video		AV

Originale	Sostituto	Sostituto
Resume	 + 	Shift + Ok
Key+	 + 	Shift + Up
Record		Rec
Game		Media
R/L		Red
Np		Green
Audio	 + 	Shift + Dual
Play		Play
+10		Guide
Karaoke/Step	 + 	Shift + Pause
Play/Back	 + 	Shift + Play
Echo+	 + 	Shift + Ch +
Info		Info
Echo-	 + 	Shift + Ch -
Rewind		<<
0		0
C/CH		Pre Ch





Originale	Sostituto	
Search		TV/R
Lang		Dual
3D		3D
F.Forward		>>
5.1Ch		Shift + 5
2.1Ch		Shift + 2
NTSC/PAL		Shift + 4
Dimmer		Shift + 0

Originale	Sostituto

