 
 
 
 





 

 
 
 
 

 
 

 
 





 



Originale	Sostituto	Originale	Sostituto
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Originale	Sostituto
 ↑	 Shift + Ch +
 ↓	 Shift + Ch -
 A - B	 I <<
 STEP	 >> I
 STOP	 Stop
 PAUSE	 Pause
 REC	 Rec
 REW	 <<
 PLAY	 Play
 FWD	 >>
 SUBTITLE	 Subt
 V-FORMAT	 Format
 INFO	 Info
 OPTION	 Options
 PLAYLIST	 Media
 LIST	 List
 TIME	 AV

Originale	Sostituto
 BOOK	 Smart

