

 
 







 


 



 
 










 
 


 
 
 


 






 
 
 
 



 
 
 




 
 
 


 
 
 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Display		Info
	Mute		Mute		TV / Radio		TV/R
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		FAV		Pre Ch
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Rec List		List		Rec		Rec
	Recall		Back		Timeshift		Media
	Auto		Smart		CH+		Ch +
	Subtitle		Subt		CH-		Ch -
	Audio		Dual		Source		AV



