





 



 





 

 

 
 
 
 


 

 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 EPG	 Guide / EPG / -/-
 Up / PR+	 CH+ / Page+
 Up / PR+	 Up

Originale	Sostituto
 Menu	 Menu / Home
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK / List	 OK
 OK / List	 Smart / List
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 FAV	 Fav / Marker / PC
 Down / PR-	 CH- / Page-
 Down / PR-	 Down
 Exit	 Exit / Cancel / Clear
 Red / Find	 Red / Netflix / Search
 ↑	 >> / Preset+
 ↑	 >> / Tune+
 Green / Zoom	 Zoom / Size
 Green / Zoom	 Green / APP / Repeat
 ↓	 << / Tune-





Originale	Sostituto
 ↓	 I << / Preset-
 Blue / LR	 Blue / Prime Video / Random
 Blue / LR	 Audio / Lang I/II
 Yellow / TXT	 Text / Goto
 Yellow / TXT	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Sleep	 Sleep / Timer
 [::]	 Picture / Format
 Info	 Info / Angle

Originale	Sostituto

