









 
 


 
 


 









 

 

 

 

 
 

 
 

 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 ↑	 Shift + Guide
 Menu	 Menu
 i	 Info
 Up	 Up
 Left / I<<	 Left

Originale	Sostituto
 OK	 Ok
 Right / >>I	 Right
 Down	 Down
 EPG	 Guide
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 ^	 Ch +
 v	 Ch -
 << / [ ↓ ]	 <<
 >> / [ □ ]	 >>
 Play	 Play
 Stop / [ ? ]	 Stop
 Pause	 Pause
 Rec / [ ≡ ]	 Rec
 RED / TV	 Red
 Green / Picture	 Green





Originale		Sostituto		Originale		Sostituto	
	RED / TV		AV				
	Yellow / Video		Yellow				
	Blue / Audio		Blue				
	www		Smart				
	♥		Pre Ch				
	?		Options				
	Orange		Media				

