

 





 




 


 
 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Back		Back
	1		1		Text		Text
	2		2		Menu		Menu
	3		3		Guide		Guide
	4		4		P+		Ch +
	5		5		P-		Ch -
	6		6		↑		Shift + Ch +
	7		7		↓		Shift + Ch -
	8		8		Up		Up
	9		9		Left		Left
	0 / □		0		OK		Ok
	Exit / TV/Radio		Exit		Right		Right
	Exit / TV/Radio		TV/R		Down		Down
	Mute		Mute		Red		Red
	Vol-		Vol -		Green / Option		Green
	Vol+		Vol +		Green / Option		Options
	i		Info		Yellow / Freeze		Yellow





Originale		Sostituto		Originale		Sostituto	
	Yellow / Freeze		Pause				
	Blue / Recall		Blue				
	Blue / Recall		Pre Ch				

