
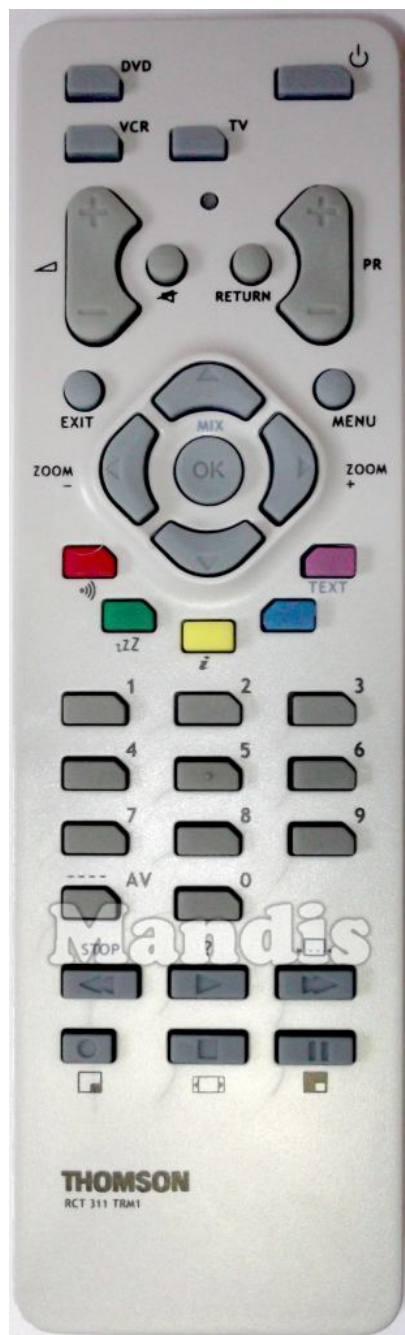 


Originale	Sostituto
 Power	 Power
 DVD	 Smart
 VCR	 Media
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Left / Zoom-	 Left
 OK / Mix	 Ok
 Right / Zoom+	 Right
 Down	 Down

Originale	Sostituto
 Red / ●)))	 Red
 Green / zZZ	 Green
 Yellow / i	 Yellow
 Blue	 Blue
 Purple / Text	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ---- AV	 Guide
 ---- AV	 AV

 




Originale	Sostituto
 Stop	 Stop
 ?	 E-MANUAL D.MENU D. Menu
 <.> >	 ECO 3D 3D
 [■]	 SETTINGS OPT Options
 [◀▶]	 PICTURE FORMAT Format
 □	 AD SUBT Subt

Originale	Sostituto

 


 
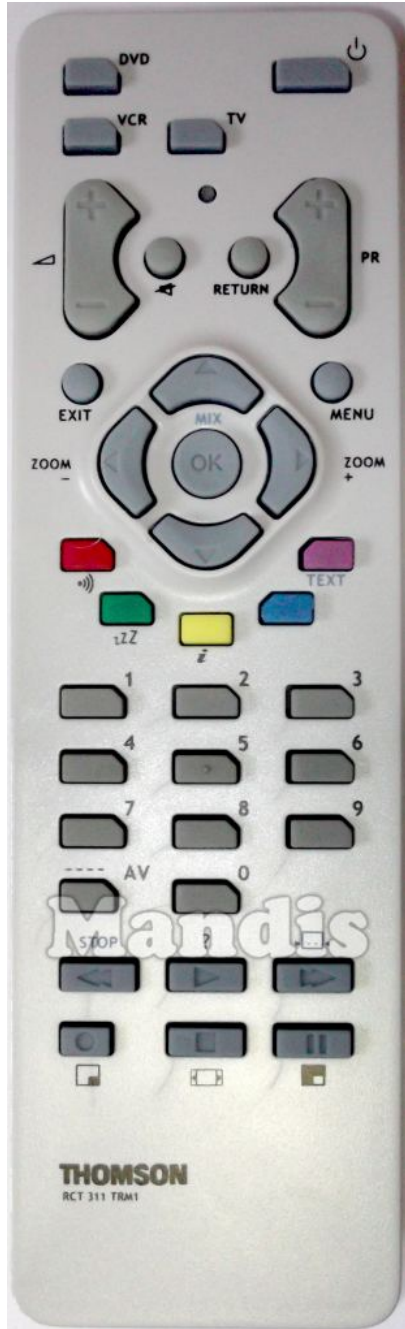 








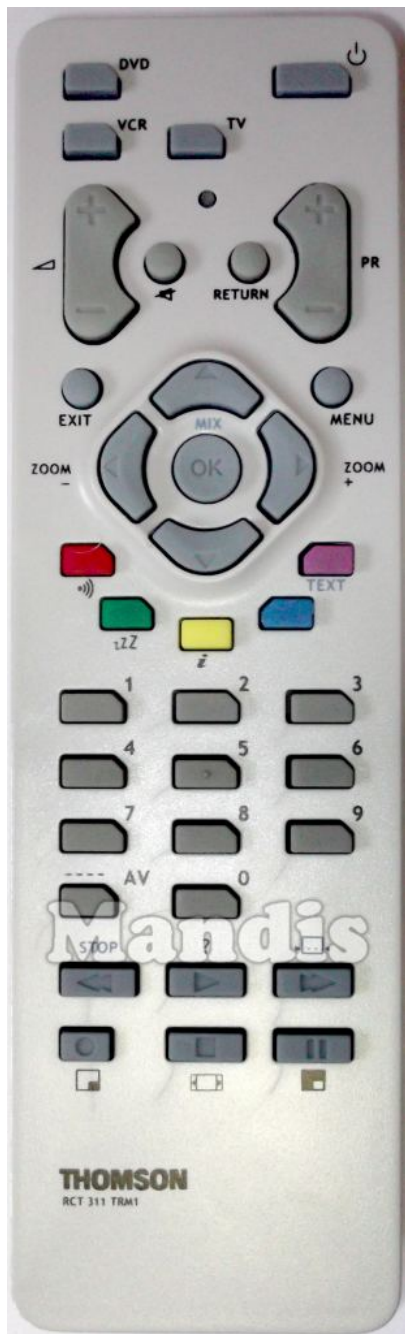 




 




Originale	Sostituto
 Power	 Power
 DVD	 Smart
 VCR	 Media
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Left	 Left
 Zoom-	 I<<
 OK	 Ok
 Right	 Right

 
Originale	Sostituto
 Zoom+	 >>I
 Down	 Down
 Red	 Red
 Green	 Green
 zZZ	 List
 Info	 Info
 Yellow	 Yellow
 Blue	 Blue
 Purple / Text	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



 

 

 

 

 
 
 

 
 
 
 
 
 




 
 

 

 


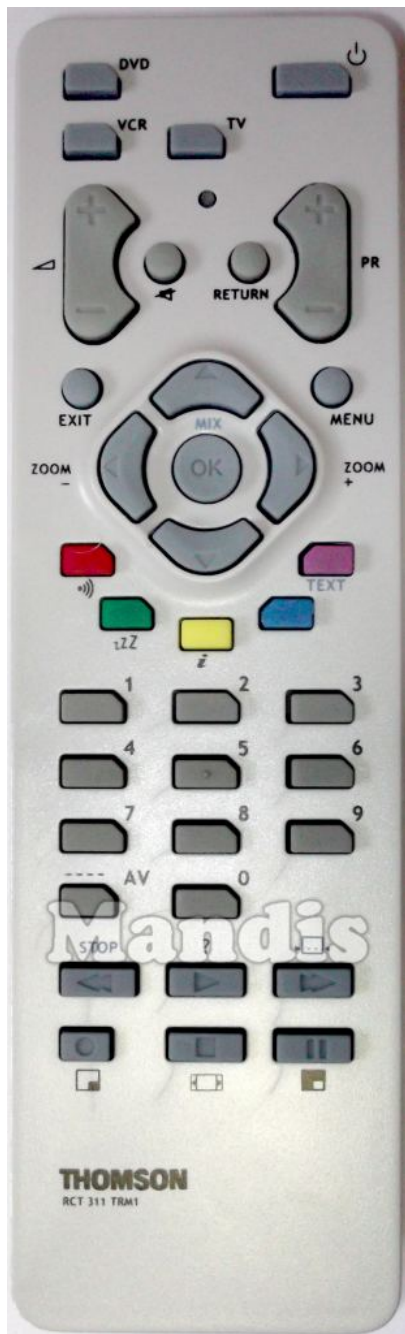


Originale		Sostituto		Originale	Sostituto
	9		9		
	0/--		0		
	AV		AV		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Stop		Stop		
	Pause		Pause		

 




Originale	Sostituto
 Power	 Power
 DVD	 Smart
 VCR	 Media
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Left	 Left
 Zoom-	 I<<
 OK	 Ok
 Right	 Right

Originale	Sostituto
 Zoom+	 >>I
 Down	 Down
 Red	 Red
 Green	 Green
 zZZ	 List
 Info	 Info
 Yellow	 Yellow
 Blue	 Blue
 Purple / Text	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



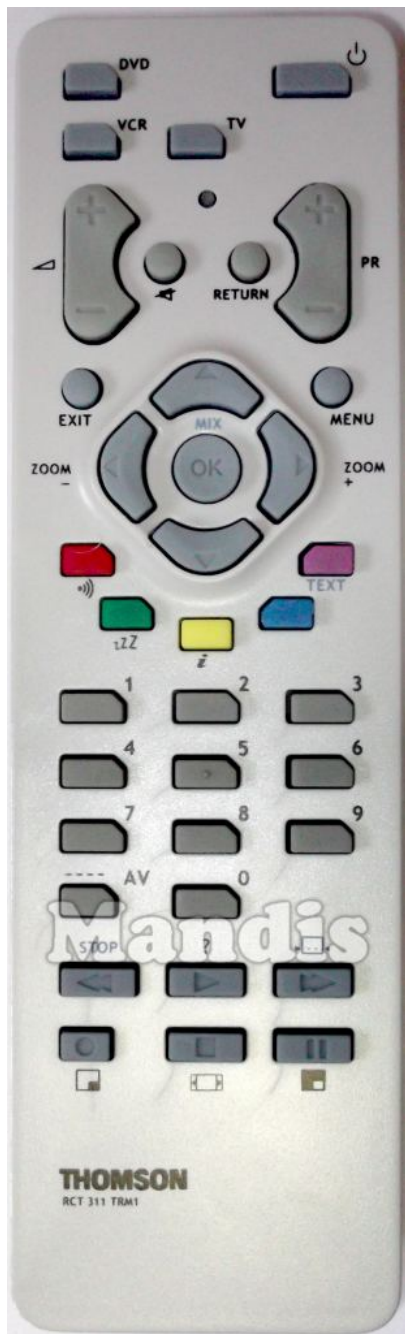

Originale		Sostituto		Originale		Sostituto	
	9		9				
	0/--		0				
	AV		AV				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Pause		Pause				

