




 













 

 
 

 
 





 






Originale	Sostituto
 Standby	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Display	 Info
 Picture	 Shift + Format
 Sleep	 Sleep
 Mode	 Smart

Originale	Sostituto
 Return	 Back
 Up	 Up
 Left	 Left
 Menu	 Menu
 Menu	 Ok
 Right	 Right
 Down	 Down
 Mute	 Mute
 Zoom	 Eject
 Nicam/A2	 Dual
 Sound	 Shift + Dual
 Text	 Text
 Cancel	 Exit
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue





Originale	Sostituto
MIX	SHIFT + REPEAT TEXT Shift + Text
SIZE	PICTURE FORMAT Format
HOLD	■ Stop
REVEAL	APP MEDIA Media
INDEX	SETTINGS OPT Options
SUBPAGE	AD SUBT Subt
Up	+ CH Ch +
Down	CH - Ch -
Left	VOL - Vol -
Right	+ VOL Vol +

Originale	Sostituto

