







 



 

 























| Originale | Sostituto |
|---|---|
|  Power |  Power |
|  Red/Demo |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Option |  Setup / OPT / |
|  [I] |  Guide / EPG / -/-- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu/Browse |  Menu / Home |
|  [≡] |  Text / Goto |
|  Vol+ |  Vol+ |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |

| Originale | Sostituto |
|---|---|
|  Mute |  Mute / Dimmer |
|  P- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  AV |  AV / Input / RDS |
|  0 |  0 |
|  P<P |  Back / Return |
|  << |  << / Tune- |
|  Stop/Cancel |  Exit / Cancel / Clear |
|  Stop/Cancel |  Stop / Hold |





| Originale | Sostituto | Originale | Sostituto |
|--|---|-----------|-----------|
|  Play |  Play / Slow | | |
|  >> |  >> / Tune+ | | |
|  Rec |  Rec / Rec Mode | | |
|  [i+] |  Info / Angle | | |
|  [12] |  Display / Media | | |
|  FAV |  Fav / Marker / PC | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |












 




| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Red/Demo |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Guide |  Guide / EPG / -/-- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Teletext |  Text / Goto |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |

| Originale | Sostituto |
|---|---|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  P↔P |  Fav / Marker / PC |
|  << |  << / Tune- |
|  Stop/Cancel |  Stop / Hold |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |
|  Info |  Info / Angle |
|  [12] |  Zoom / Size |
|  Subtitle |  Subtitle / EQ |





| Originale | Sostituto | Originale | Sostituto |
|-----------|---|-----------|-----------|
| Back |  Back / Return | | |
| Pause |  Pause / Step / Freeze | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

