







 



 

 























Originale	Sostituto
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 [ I ]	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu/Browse	 Menu / Home
 [ = ]	 Text / Goto
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Originale	Sostituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 P<P	 Back / Return
 <<	 << / Tune-
 Stop/Cancel	 Exit / Cancel / Clear
 Stop/Cancel	 Stop / Hold





Originale		Sostituto		Originale		Sostituto	
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	[i+]		Info / Angle				
	[12]		Display / Media				
	FAV		Fav / Marker / PC				






Originale	Sostituto
Power	Power
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
P+	CH+ / Page+
P-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
0	0
P↔P	Fav / Marker / PC
<<	<< / Tune-
Stop/Cancel	Stop / Hold
Play	Play / Slow
>>	>> / Tune+
Info	Info / Angle
Subtitle	Subtitle / EQ
Back	Back / Return
Pause	Pause / Step / Freeze







Originale	Sostituto
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Teletext	 Text / Goto
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P↔P	 Fav / Marker / PC
 <<	 << / Tune-
 Stop/Cancel	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 [12]	 Zoom / Size
 Subtitle	 Subtitle / EQ





Originale	Sostituto
Back	 Back / Return
Pause	 Pause / Step / Freeze

Originale	Sostituto

