



Originale		Sostituto		Originale		Sostituto	
	Standby	+	Shift + Power		HALL	+	Shift + Display / Media
	System Power		Power		3		3
	CD	+	Shift + 3		Jazz		Zoom / Size
	MD / CD-R	+	Shift + TV/Radio / Program		4		4
	TUNER	+	Shift + 6		Rock		Picture / Format
	Sleep		Sleep / Timer		Music		Smart / List
	DVD	+	Shift + 2		5		5
	DTV/CBL		Back / Return		Entertain		D.Menu / Top
	V-AUX	+	Shift + 7		6		6
	Multi CH In	+	Shift + Smart / List		7		7
	VCR	+	Shift + 4		TV Thtr		TV/Radio /
	Volume+		Vol+		Movie		Display / Media
	Volume-		Vol-		8		8
	Mute		Mute / Dimmer		Dolby DTS		Sound / Title
	Stereo	+	Shift + 1		9		9
	1		1		Night		Info / Angle
	2		2		0		0





	Originale	Sostituto	Originale	Sostituto
	EX/ES	 AV / Input / RDS		
	Straight / Effect	 Text / Goto		
	Level	 Menu / Home		
	Preset/CH+	 CH+ / Page+		
	Up	 Up		
	Set Menu	 Setup / OPT /		
	A/B/C/D/E	 Yellow / YouTube / Repeat		
	Left	 Left		
	Enter	 OK		
	Select	 Shift + OK		
	Right	 Right		
	Preset/CH-	 CH- / Page-		
	Down	 Down		

