


 



 





























Originale		Sostituto		Originale		Sostituto	
	Standby		Shift + Power		HALL		Shift + Display / Media
	System Power		Power		3		3
	CD		Shift + 3		Jazz		Zoom / Size
	MD / CD-R		Shift + TV/Radio / Program		4		4
	TUNER		Shift + 6		Rock		Picture / Format
	Sleep		Sleep / Timer		Music		Smart / List
	DVD		Shift + 2		5		5
	DTV/CBL		Back / Return		Entertain		D.Menu / Top
	V-AUX		Shift + 7		6		6
	Multi CH In		Shift + Smart / List		7		7
	VCR		Shift + 4		TV Thtr		TV/Radio /
	Volume+		Vol+		Movie		Display / Media
	Volume-		Vol-		8		8
	Mute		Mute / Dimmer		Dolby DTS		Sound / Title
	Stereo		Shift + 1		9		9
	1		1		Night		Info / Angle
	2		2		0		0





	Originale	Sostituto
	EX/ES	 AV / Input / RDS
	Straight / Effect	 Text / Goto
	Level	 Menu / Home
	Preset/CH+	 CH+ / Page+
	Up	 Up
	Set Menu	 Setup / OPT /
	A/B/C/D/E	 Yellow / YouTube / Repeat
	Left	 Left
	Enter	 OK
	Select	 +  Shift + OK
	Right	 Right
	Preset/CH-	 CH- / Page-
	Down	 Down

Originale	Sostituto

