

 
 










 
 


 




 

 
 
 







 

 


 




 





 
 
 
 

 




 





 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Update	 Media	Menu Down	 Down
Reveal	 Smart	Back	 Back
Txt Stop	 Stop	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8

 
 
 


 

 

 

 
 




 



Originale	Sostituto	Originale	Sostituto
9			
Guide -/-- 1.			
0/10			
2.Fav P/C 2.			
Red			
Green			
Yellow			
Blue			
4.# 16:9			



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Return	 Back
Slow Down	 I<<	Menu Right	 Right
Subt.	 Subt	Menu Down	 Down
Auto/Track	 Green	Volume+	 Vol +
Slow Up	 >>I	Progr.	 Sleep
Rep/A-B	 +  Shift + Text	Next	 Ch +
Stop	 Stop	Volume-	 Vol -
Title	 List	Top Menu	 D. Menu
Zoom	 +  Shift + Eject	Prev.	 Ch -
Repeat/1/All	 Text	1	 1
Pause	 Pause	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8		8	8
9		9	9
+10		Guide	Guide
EQ		Media	Media
0		0	0
C/CH		Pre Ch	Pre Ch
Digest		Red	Red
Record		Rec	Rec
Open/Close		Eject	Eject
Mode		Smart	Smart
Angle		TV/R	TV/R
Rewind		<<	<<
Play		Play	Play
Clear/00:00		Exit	Exit
Audio		Dual	Dual
F.Forward		>>	>>
NTSC/PAL		Format	Format
		Setup	 Options
		3D	 3D

