







 
 

 


 
 
 
 
 




 

 

 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Back	 Back
 Nicam	 D. Menu
 Aspect	 Format
 Sleep	 Sleep

Originale	Sostituto
 DTV	 Smart
 Source	 AV
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Freeze	 Shift + Pause
 Media	 Media
 Rec	 Rec
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 P.Mode	 Shift + Format





Originale	Sostituto
S.Mode	+ Shift + Dual
Play/Pause	Play
Stop	Stop
Play/Pause	Pause
<< / Index	<<
>> / Size	>>
I<< / Reveal	I<<
>>I / Subpage	>>I
Text	Text
Hold	+ Shift + Stop
EPG	Guide
Subtitle	Subt
Info	Info
FAV	Pre Ch
Audio	Dual
TV / Radio	TV/R
Red	Red

Originale	Sostituto
Green	Green
Yellow	Yellow
Cyan	Blue

