









 


 


 
 


 
 
 
 

 







 
 

 
 
 
 

 



 
 

 
 

 




















Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Tv/Radio		TV/R		Left		Left
	Play		Play		OK		Ok
	Pause		Pause		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	<<		<<		Mute		Mute
	>>		>>		i		Info
	Rec		Rec		P+		Ch +
	Media		Media		P-		Ch -
	Lang.		Dual		Red / PVR		Red
	SUB		Subt		Green		Green
	Guide		Guide		Yellow/Timer		Yellow
	Menu		Menu		Blue		Blue
	FAV.		Pre Ch		1		1
	X/Exit		Exit		2		2
	Up		Up		3		3
	Down		Down		4		4





	Originale	Sostituto	Originale	Sostituto
	5 jkl	5	5	5
	6 mno	6	6	6
	7 pqrs	7	7	7
	8 tuv	8	8	8
	9 wxyz	9	9	9
	0 & .	0	0	0
	TTX	TTX	REPEAT TEXT	Text
	CH	CH Back	RETURN BACK	Back

