



Originale	Sostituto
 ON	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL / SAT	 Shift + 0
 GAME	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 TUNER	 Shift + 6
 TV/CD	 Shift + 3
 TV/CD	 Shift + 1
 PHONO	 Shift + Guide / EPG / -/-
 PORT	 Fav / Marker / PC
 NET	 Shift + 9
 USB	 Shift + 8
 Muting	 Mute / Dimmer

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 SP Layout	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-





Originale	Sostituto
	Play / Slow
	>> / Tune+
Pause / Play Rev.	Pause / Step / Freeze
	Stop / Hold
Movie / TV	Red / Netflix / Search
Music	Green / APP / Repeat
Game	Yellow / YouTube / Repeat
Thx	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
Dimmer	+  Shift + Mute / Dimmer
D.TUN	Text / Goto
0	0
Sleep	Sleep / Timer







Originale	Sostituto
 ON	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL / SAT	 Shift + 0
 GAME	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 TUNER	 Shift + 6
 TV/CD	 Shift + 3
 TV/CD	 Shift + 1
 PHONO	 Shift + Guide / EPG / -/-
 PORT	 Fav / Marker / PC
 NET	 Shift + 9
 USB	 Shift + 8
 Muting	 Mute / Dimmer

Originale	Sostituto
 CH+ / Album+	 CH+ / Page+
 Vol+	 Vol+
 CH- / Album-	 CH- / Page-
 Vol-	 Vol-
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left / Playlist-	 Left
 Enter	 OK
 Right / Playlist+	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-





Originale	Sostituto
Play	Play / Slow
>>	>> / Tune+
Pause / Play Rev.	Pause / Step / Freeze
Stop	Stop / Hold
Search	Red / Netflix / Search
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
Play Mode	Yellow / YouTube / Repeat
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Originale	Sostituto
--/-- +10	Guide / EPG / -/--
0	0
Sleep	Sleep / Timer
CLR	Exit / Cancel / Clear







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Display		Display / Media
	BD / DVD		Shift + 2
	VCR / DVR		Shift + 4
	CBL / SAT		Shift + 0
	GAME		Shift + 5
	PC		Shift + Fav / Marker / PC
	AUX		Shift + 7
	TUNER		Shift + 6
	TV / CD		Shift + 3
	TV / CD		Shift + 1
	PHONO		Shift + Guide / EPG / -/-
	PORT		Fav / Marker / PC
	NET		Shift + 9
	USB		Shift + 8
	Muting		Mute / Dimmer
	CH+		CH+ / Page+

Originale	Sostituto	Originale	Sostituto
	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	SP Layout		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Home		Shift + Menu /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow





Originale	Sostituto
	>> / Tune+
	Pause / Step / Freeze
	Stop / Hold
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+  Shift + Mute / Dimmer

Originale	Sostituto
	D.TUN Text / Goto
	0
	Sleep / Timer







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Display		Display / Media
	BD / DVD		Shift + 2
	VCR / DVR		Shift + 4
	CBL / SAT		Shift + 0
	GAME		Shift + 5
	PC		Shift + Fav / Marker / PC
	AUX		Shift + 7
	TUNER		Shift + 6
	TV / CD		Shift + 3
	TV / CD		Shift + 1
	PHONO		Shift + Guide / EPG / -/-
	PORT		Fav / Marker / PC
	NET		Shift + 9
	USB		Shift + 8
	Muting		Mute / Dimmer
	CH+		CH+ / Page+

Originale	Sostituto	Originale	Sostituto
	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	SP Layout		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Home		Shift + Menu /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow





Originale	Sostituto
	>> / Tune+
	Pause / Step / Freeze
	Stop / Hold
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+  Shift + Mute / Dimmer

Originale	Sostituto
	D.TUN Text / Goto
	0
	Sleep / Timer

