 

 

 
 


 
 
 
 

 
 
 

 

 

 

 

 

 

 

 

 

 

 

 


Originale	Sostituto
Power TV	Power
1 TV	1
2 TV	2
3 TV	3
4 TV	4
5 TV	5
6 TV	6
7 TV	7
8 TV	8
9 TV	9
0/-- TV	0
AV TV	AV
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Return TV	Back
PR+ TV	Ch +

Originale	Sostituto
PR- TV	Ch -
Play TV	Play
<< TV	<<
>> TV	>>
Record TV	Rec
Stop TV	Stop
Pause TV	Pause
Exit TV	Exit
Menu TV	Menu
Violet/Text TV	Text
Red/Presets TV	Red
Green/List TV	Green
Yellow/Info TV	Yellow
Blue/Guide TV	Blue
Up TV	Up
Down TV	Down
Right/Zoom+	Right

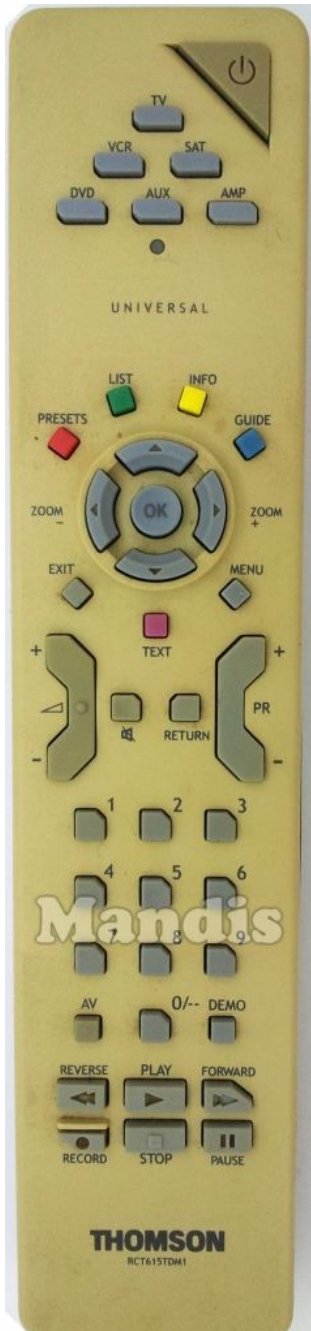



Originale	Sostituto
 Left/Zoom- TV	 Left
 OK TV	 Ok
 TV	 TV/R
 Demo TV	 Pre Ch
 VCR	 Smart
 SAT	 Media
 DVD	 Options
 AUX	 Format
 AMP	 3D
 Power AUX	 Shift + Power
 Red/Presets	 Shift + Red
 Green/List AUX	 Shift + Green
 Yellow/Info AUX	 Shift + Yellow
 Blue/Guide AUX	 Shift + Blue
 Up AUX	 Shift + Up
 OK AUX	 Shift + Ok
 Down AUX	 Shift + Down





 
 
 
 
 

 



 

 

 

 
 

 
 
 
 
 
 

 

 

 

 

 

 


 



 


 











 
 
 

 
 
Originale	Sostituto
 Right/Zoom+	 Shift + Right
 Left/Zoom- AUX	 Shift + Left
 Exit AUX	 Shift + Exit
 Menu AUX	 Shift + Menu
 Violet/Text AUX	 Shift + Text
 Return AUX	 Shift + Back
 PR+ AUX	 Shift + Ch +
 PR- AUX	 Shift + Ch -
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4
 5 AUX	 Shift + 5
 6 AUX	 Shift + 6
 7 AUX	 Shift + 7
 8 AUX	 Shift + 8
 9 AUX	 Shift + 9









Originale		Sostituto		Originale		Sostituto	
	Power DVD		Power		PR+ DVD		Ch +
	Red/Presets		Red		PR- DVD		Ch -
	Green/List DVD		Green		1 DVD		1
	Yellow/Info DVD		Yellow		2 DVD		2
	Blue/Guide DVD		Blue		3 DVD		3
	Violet/Text DVD		Text		4 DVD		4
	Up DVD		Up		5 DVD		5
	Down DVD		Down		6 DVD		6
	Right/Zoom+		Right		7 DVD		7
	Left/Zoom- DVD		Left		8 DVD		8
	OK DVD		Ok		9 DVD		9
	Exit DVD		Exit		0 DVD		0
	Menu DVD		Menu		AV DVD		AV
	Vol+		Vol +		Demo DVD		Pre Ch
	Vol-		Vol -		Play DVD		Play
	Mute		Mute		<< DVD		<<
	Return DVD		Back		>> DVD		>>







 
Originale	Sostituto
Record DVD	Rec
Stop DVD	Stop
Pause	Pause
TV	TV/R
VCR	Smart
SAT	Media
DVD	Options
AUX	Format
AMP	3D
Power VCR	Shift + Power
Red/Presets	Shift + Red
Green/List VCR	Shift + Green
Yellow/Info VCR	Shift + Yellow
Blue/Guide VCR	Shift + Blue
Violet/Text VCR	Shift + Text
Exit VCR	Shift + Exit
Menu VCR	Shift + Menu







 

 


 
 
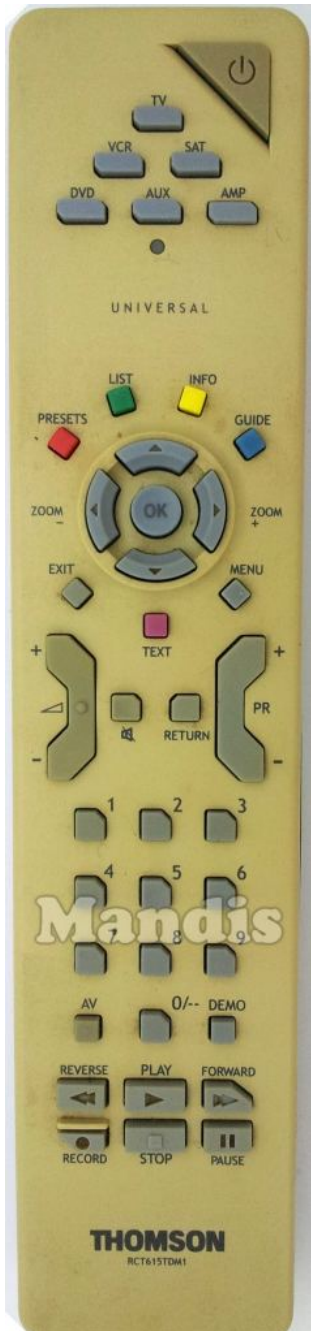 


 





 
 


 

 

 

 
 
 
 
 





 
 

 



 
 

 
Originale	Sostituto
Up VCR	Shift + Up
Down VCR	Shift + Down
Right/Zoom+	Shift + Right
Left/Zoom- VCR	Shift + Left
OK VCR	Shift + Ok
Return VCR	Shift + Back
PR+ VCR	Shift + Ch +
PR- VCR	Shift + Ch -
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9



 



 


 
 
 

 
 
 

 
 
 




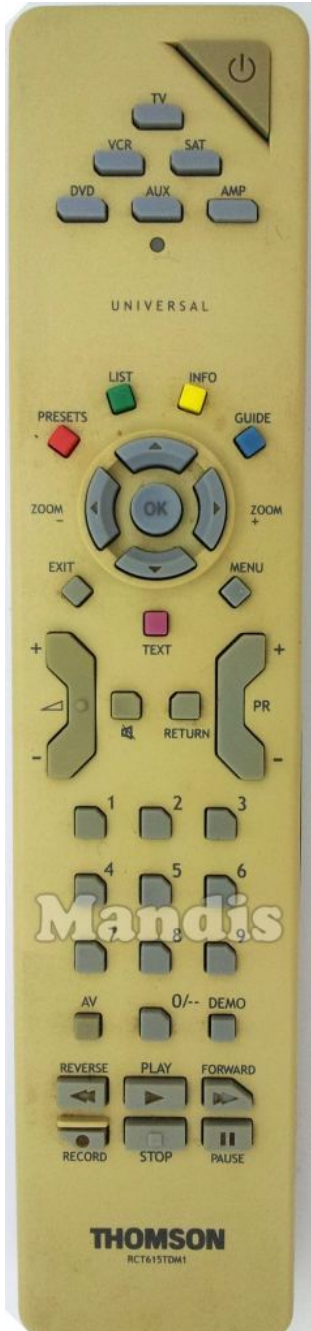


Originale		Sostituto		Originale		Sostituto	
	Power		Power		Exit		Exit
	TV		TV/R		Menu		Menu
	VCR		Smart		Vol+		Vol +
	SAT		Media		Vol-		Vol -
	DVD		Options		Mute		Mute
	AUX		Format		Return		Back
	AMP		3D		PR+		Ch +
	Red/Presets		Red		PR-		Ch -
	Green/List		Green		1		1
	Yellow/Info		Yellow		2		2
	Blue/Guide		Blue		3		3
	Violet/Text		Text		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right/Zoom+		Right		7		7
	Left/Zoom-		Left		8		8
	OK		Ok		9		9

 




Originale		Sostituto		Originale		Sostituto	
	0		0				
	AV		AV				
	Demo		Pre Ch				
	<<		<<				
	Play		Play				
	>>		>>				
	Record		Rec				
	Stop		Stop				
	Pause		Pause				



 


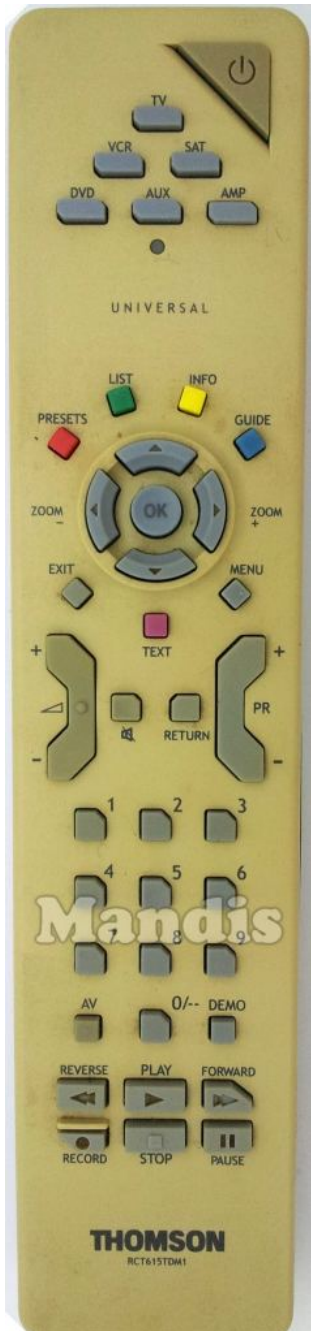


 
 
 

 
 




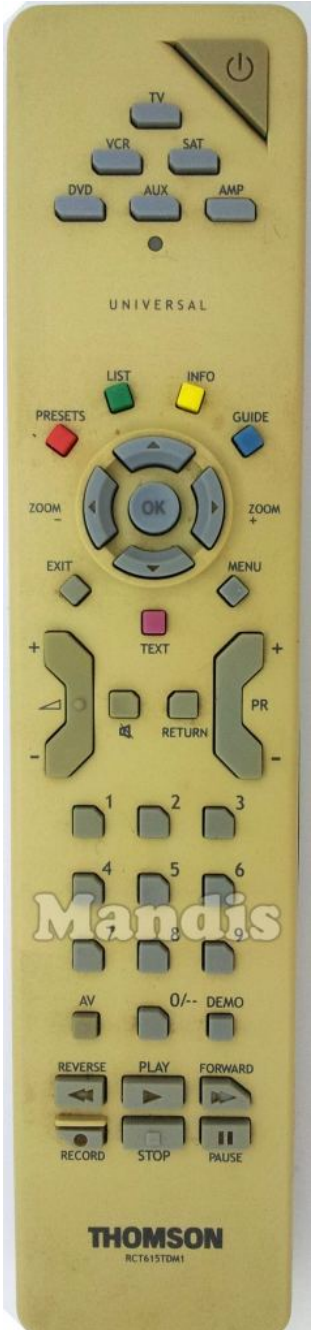


Originale	Sostituto
 Power	 Power
 TV	 TV/R
 VCR	 Smart
 SAT	 Media
 DVD	 Options
 AUX	 Format
 AMP	 3D
 Red/Presets	 Red
 Yellow/Info	 Yellow
 Blue/Guide	 Blue
 Violet/Text	 Text
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 Ok
 Exit	 Exit

Originale	Sostituto
 Menu	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale		Sostituto		Originale		Sostituto	
	AV		AV				
	<<		<<				
	Play		Play				
	>>		>>				
	Record		Rec				
	Stop		Stop				
	Pause		Pause				

