



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Tv Input	AV
Open/close	Eject
Vol+	Vol +
Vol-	Vol -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit

Originale	Sostituto
Audio	Dual
Picture Navi	List
Subtitle	Subt
Menu	Menu
Time/Text	Text
Return	Back
Display	Info
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
I<<	I<<
←/Replay/◀◀	Ch -
▶▶/Advance/→	Ch +
>>I	>>I
<<I	<<



