


 







 








 

 
 



 
 







Originale	Sostituto
 Power	 Power
 Menu	 Menu
 [+]/Aspect	 3D
 Input TV	 TV/R
 Input AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 i	 Info
 X/Exit	 Exit
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Originale	Sostituto
 OK	 Ok
 Netflix	 Media
 Home	 Smart
 Guide	 Guide
 Mute	 Mute
 Text	 Text
 STTL	 Subt
 APPS	 Shift + Smart
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale		Sostituto	
	6		6
	7		7
	8		8
	9		9
	0		0
	?/eHelp		Dual
	Recall		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause
	>>l		>>l
	Stop		Stop
	Rec		Rec
	My APP	 + 	Shift + Media

Originale		Sostituto	

