




 
 




Originale		Sostituto		Originale		Sostituto	
	Power VCR		Power		Tracking/V-Lock-		Ch -
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Play		Play		5		5
	Stop		Stop		6		6
	>>		>>		7		7
	<<		<<		8		8
	Pause/Slow		Pause		9		9
	Rec/OTR		Rec		0		0
	Display		Info		-/--		Guide
	Zero Stop		Smart		Input Select		AV
	Jog/Shuttle On		Media		Vol+		Vol +
	I<< Index		I<<		Vol-		Vol -
	>>I Index		>>I		OSD		Back
	Tracking/V-Lock+		Ch +		Audio Out		Dual












 





 


 




 

 

 








Originale	Sostituto
 Tv/AV	 Pre Ch
 TV CH+	 Shift + Ch +
 TV CH-	 Shift + Ch -
 Power Tv	 Shift + Power
 << Wheel	 Shift + Left
 Wheel >>	 Shift + Right
 Central Wheel >>	 Shift + Up
 << Central Wheel	 Shift + Down
 Reset	 TV/R
 Menu	 Menu
 Exit	 Exit
 Store	 3D
 PDC/VPS	 Blue
 SP/LP	 Format
 Timer Rec	 Red
 Check	 Green
 Transmit	 Yellow

Originale	Sostituto
 Nothing 1	 Shift + AV
 Nothing 2	 Shift + Format
 Direct Tv Rec	 Options
 AV Link	 Text
 Jog/Shuttle ▲	 Shift + Media





	Originale	Sostituto	Originale	Sostituto
	Power			Power
	Direct Tv Rec			Options
	CH+			Ch +
	CH-			Ch -
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	-/--			Guide
	Vol+			Vol +
	Vol-			Vol -





	Originale	Sostituto	Originale	Sostituto
	Power VCR	Power		Index >>I
	Up	Up		Tracking/V.Lock+
	Down	Down		Tracking/V.Lock-
	Right	Right		OSD
	Left	Left		Audio Out
	Play	Play		Input Select
	Stop	Stop		Tv/AV
	>>	>>		1
	<<	<<		2
	Pause/Slow	Pause		3
	Rec/OTR	Rec		4
	Display	Info		5
	Reset	TV/R		6
	Zero Stop	Smart		7
	Jog/Shuttle On	Media		8
	Jog/Shuttle ▲	+ Shift + Media		9
	I<< Index	I<<		0





Originale		Sostituto		Originale		Sostituto	
	-/--		Guide		Check		Green
	Vol+		Vol +				
	Vol-		Vol -				
	Tv CH+		Shift + Ch +				
	Tv CH-		Shift + Ch -				
	Direct Tv Rec		Options				
	AV Link		Text				
	Menu		Menu				
	Exit		Exit				
	Store		3D				
	Nothing 1		Shift + AV				
	Nothing 2		Shift + Format				
	SP/LP		Format				
	PDC/VPS		Blue				
	Transmit		Yellow				
	Power Tv		Shift + Power				
	Timer Rec		Red				

