




 

























 

 

 



 

 





 









 

















Originale		Sostituto		Originale		Sostituto	
	[ ]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[   > <   ]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Rec / Rec Mode		Down		Down
	Red / Rec		Red / Netflix / Search		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		>> / Tune+		2		2
	White / >>		Fav / Marker / PC		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5



























 

 
 




 


 


 





 










	Originale	Sostituto	Originale	Sostituto
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		

 



 



 





	Originale	Sostituto	Originale	Sostituto
	DVD	 +  Shift + 2		Vol+
	[1 2]	 Red / Netflix / Search		Mute
	[<- >-]	 Green / APP / Repeat		P+
	[   >   <   ]	 Yellow / YouTube / Repeat		Vol-
	<<	 << / Tune-		P-
	Stop	 Stop / Hold		1
	Play	 Play / Slow		2
	>>	 >> / Tune+		3
	[   ]	 +  Shift + Guide / EPG / -/-		4
	Up	 Up		5
	[≡]	 Text / Goto		6
	Left	 Left		7
	OK	 OK		8
	Right	 Right		9
	[> <]	 Pause / Step / Freeze		[i+]
	Down	 Down		0
	[...]	 Subtitle / EQ		P<P / -/-












 

















 



 











Originale		Sostituto		Originale		Sostituto	
	Smart Sound		Sound / Title				
	[ <> ]		D.Menu / Top				
	Smart Picture		Picture / Format				
	Instant Rec		Rec / Rec Mode				
	[■□■□]		Setup / OPT /				











 



 

 



 

















Originale		Sostituto		Originale		Sostituto	
	[ ]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[   >   <   ]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Red / Netflix / Search		Down		Down
	Red / Rec		Rec / Rec Mode		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		Fav / Marker / PC		2		2
	White / >>		>> / Tune+		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5



 






 



 


 







 













 


 






























	Originale	Sostituto	Originale	Sostituto
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		


















 




Originale		Sostituto		Originale		Sostituto	
	[ ]→		Exit / Cancel / Clear		Down		Down
	Power		Power		[...]		Subtitle / EQ
	[1 2]		Red / Netflix / Search		Vol+		Vol+
	[← →]		Green / APP / Repeat		Mute		Mute / Dimmer
	[   > < ]		Yellow / YouTube / Repeat		P+		CH+ / Page+
	Rec		Rec / Rec Mode		Vol-		Vol-
	<<		<< / Tune-		P-		CH- / Page-
	Stop		Stop / Hold		1		1
	Play		Play / Slow		2		2
	>>		>> / Tune+		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5
	[≡]		Text / Goto		6		6
	Left		Left		7		7
	OK		OK		8		8
	Right		Right		9		9
	[> <]		Pause / Step / Freeze		[i+]		Info / Angle





Originale		Sostituto	
	0		0
	P<P / -/--		Guide / EPG / -/--
	[⊙]		Sleep / Timer
	[?]		AV / Input / RDS
	[↕] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[ <> ]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec		Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[ ]		Setup / OPT /

Originale	Sostituto

