





 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Open/Close	 Eject / Surround
 Guide	 Guide / EPG / -/--

Originale	Sostituto
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Media Center	 Display / Media
 Up	 Up
 Home Menu	 Menu / Home
 Pop-Up Menu	 D.Menu / Top
 Down	 Down
 Left	 Left
 Right	 Right





Originale	Sostituto
	OK
	Setup / OPT /
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Text / Goto
	Subtitle / EQ
	TV/Radio /
	Sleep / Timer
	Smart / List
	+ Shift + Display / Media
	Sound / Title
	Picture / Format
	Audio / Lang I/II

Originale	Sostituto
	Canal Play / Fav / Marker / PC
	Viera CAST / AV / Input / RDS
	+ Power Tv / Shift + Power
	+ Vol+Tv / Shift + Vol+
	+ Vol-Tv / Shift + Vol-
	+ P+Tv / Shift + CH+ /
	+ P-Tv / Shift + CH- /
	+ Av Tv / Shift + AV / Input / RDS

