 
 



 

 





 





 


 













Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Portal	 D.Menu / Top
 0	 0
 Menu	 Menu / Home
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Originale	Sostituto
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Media	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Info / Angle
	CH- / Page-
	Setup / OPT /
	Audio / Lang I/II
	Subtitle / EQ
	TV/Radio /
	Text / Goto
	+ Shift + Fav / Marker / PC
	Fav / Marker / PC
	+ Shift + Play /
	AV / Input / RDS
	Sleep / Timer

Originale	Sostituto
	Picture / Format
	Zoom / Size

