
 



 
 





 





 

 
 

 













Originale	Sostituto
 Standby / On	 Power
 Open/Close / Eject	 Eject
 Mute	 Mute
 Speaker	 Red
 Test	 Green
 Sound Mode	 Yellow
 Sound Mode	 Shift + Dual
 Sound Effect	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 Angle	 Format
 Zoom / ATR.	 Shift + Eject
 Repeat / Mode	 Text
 Step	 Pause
 Prog/Trk+	 Ch +
 Prog/Trk-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 DVD	 Shift + 1
 VCR	 Shift + 2
 FM/AM	 Shift + 3
 INPUT	 AV
 INPUT	 Shift + 4
 I<< / <<	 I<<
 Stop	 Stop
 Play/Pause	 Play





Originale	Sostituto	Originale	Sostituto
>>I / >>	>>I	Screen Fit / SVHS	Smart
Setup	Options	Audio	Dual
Setup	Menu	TV / VCR	TV/R
Display	Info	REV	<<
Clear	Exit	FWD	>>
Disc Menu	D. Menu		
Up	Up		
Left	Left		
Enter	Ok		
Right	Right		
Down	Down		
Rec	Rec		
Return / A.Dub	Back		
Index / Mark	Pre Ch		
Title / Speed	Media		
Subtitle / Timer	Subt		
Subtitle / Timer	Shift + AV		

Originale	Sostituto
Screen Fit / SVHS	Smart
Audio	Dual
TV / VCR	TV/R
REV	<<
FWD	>>

