

Originale	Sostituto	Originale	Sostituto
 Stereo	 Dual	 Select	 Ok
 Level	 Media	 Menu	 D. Menu
 Delay	 Options	 Display	 Info
 Surround	 Subt	 Disc/Deck 1/2	 Menu
 TV	 TV/R	 Tv/AV	 AV
 CD	 Yellow	 +	 Ch +
 DVD	 Blue	 -	 Ch -
 Tuner/Band	 Green	 Test	 Text
 Tape	 Red	 Power TV	 Power
 VCR	 Smart	 Tv Vol Up	 Shift + Vol +
 Vol+	 Vol +	 Tv Vol Down	 Shift + Vol -
 Vol-	 Vol -	 1 Tv	 1
 Muting	 Mute	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Down	 Down	 4 Tv	 4
 Right	 Right	 5 Tv	 5
 Left	 Left	 6 Tv	 6

 




 

 






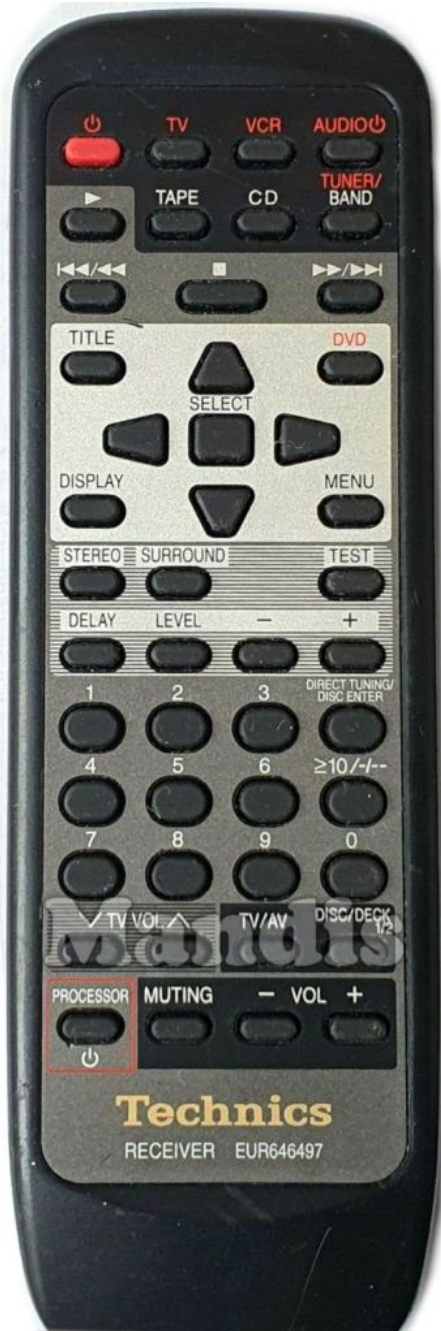





	Originale	Sostituto
	7 Tv	7
	8 Tv	8
	9 Tv	9
	0 Tv	0
	>10/-/-- Tv	Guide

 
Originale	Sostituto


 



 


 

 
 


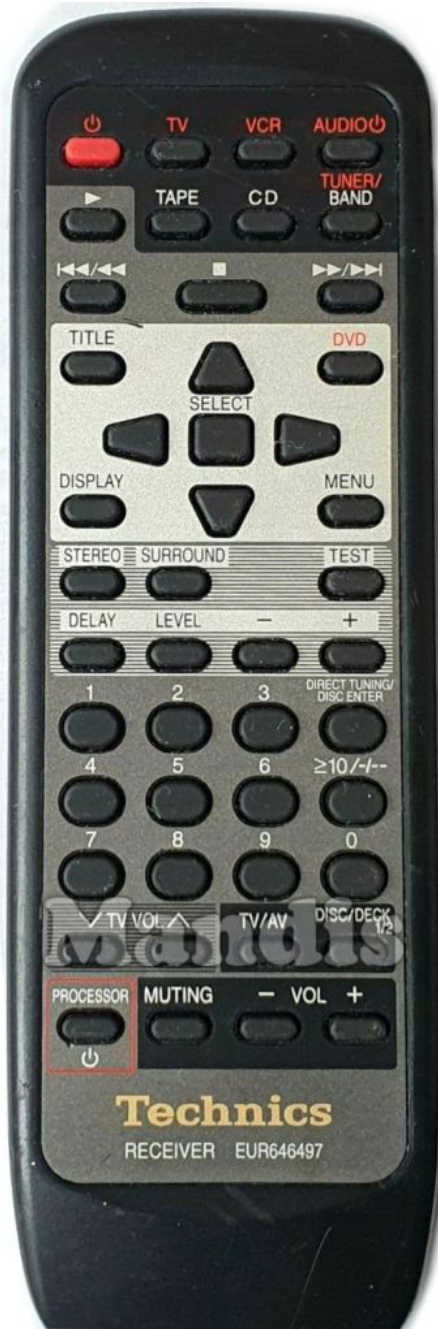

Originale	Sostituto	Originale	Sostituto
 Power DVD	 Power	 Menu	 D. Menu
 Level	 Media	 Up	 Up
 Delay	 Options	 Down	 Down
 Surround	 Subt	 Right	 Right
 Stereo	 Dual	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Text
 Tuner/Band	 Green	 +	 Ch +
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 1 DVD	 1
 DVD	 Blue	 2 DVD	 2
 Play DVD	 Play	 3 DVD	 3
 I<</<< DVD	 <<	 4 DVD	 4
 Stop DVD	 Stop	 5 DVD	 5
 >>/>>I DVD	 >>	 6 DVD	 6
 Disc/Deck 1/2	 Menu	 7 DVD	 7
 Display	 Info	 8 DVD	 8

 


 
 
 


 
 
 

 

 



 



 


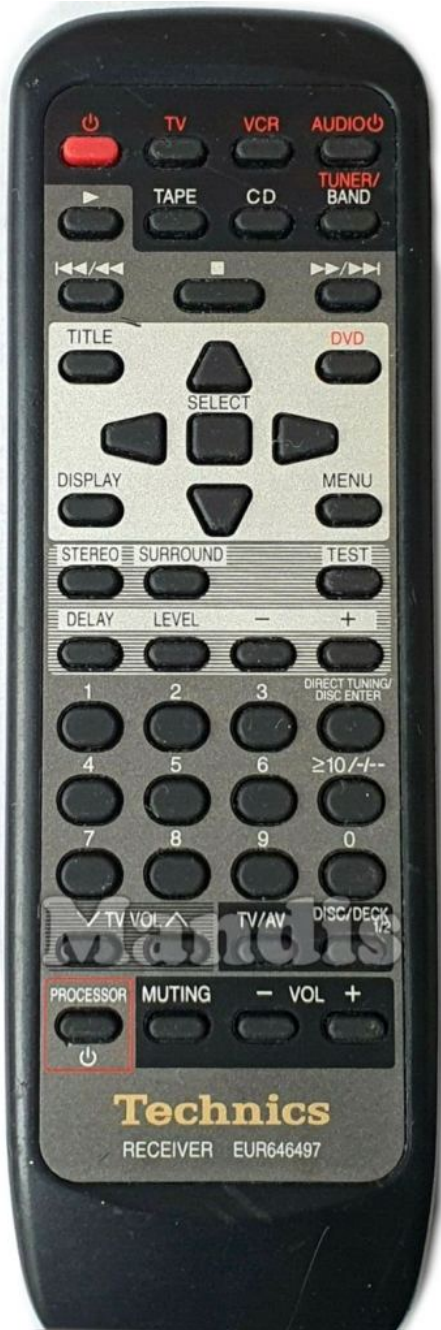
 



 



 

 
 



 
 


 
 
 
 



 


 
 



 






Originale		Sostituto	
	9 DVD		9
	0 DVD		0
	>10/-- DVD		Guide
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

 
Originale		Sostituto	





Originale	Sostituto	Originale	Sostituto
 Power CD	 Power	 Disc/Deck 1/2	 Menu
 Level	 Media	 Up	 Up
 Surround	 Subt	 Down	 Down
 Delay	 Options	 Right	 Right
 Stereo	 Dual	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Text
 CD	 Yellow	 +	 Ch +
 DVD	 Blue	 -	 Ch -
 Tape	 Red	 Vol +	 Vol +
 Tuner/Band	 Green	 Vol -	 Vol -
 Stop CD	 Stop	 Muting	 Mute
 I<</<< CD	 <<	 Power Tape	 Shift + Power
 >>/>>I CD	 >>	 Stop Tape	 Shift + Stop
 Play CD	 Play	 Play Tape	 Shift + Play
 Menu	 D. Menu	 I<</<< Tape	 Shift + <<
 Display	 Info	 >>/>>I Tape	 Shift + >>

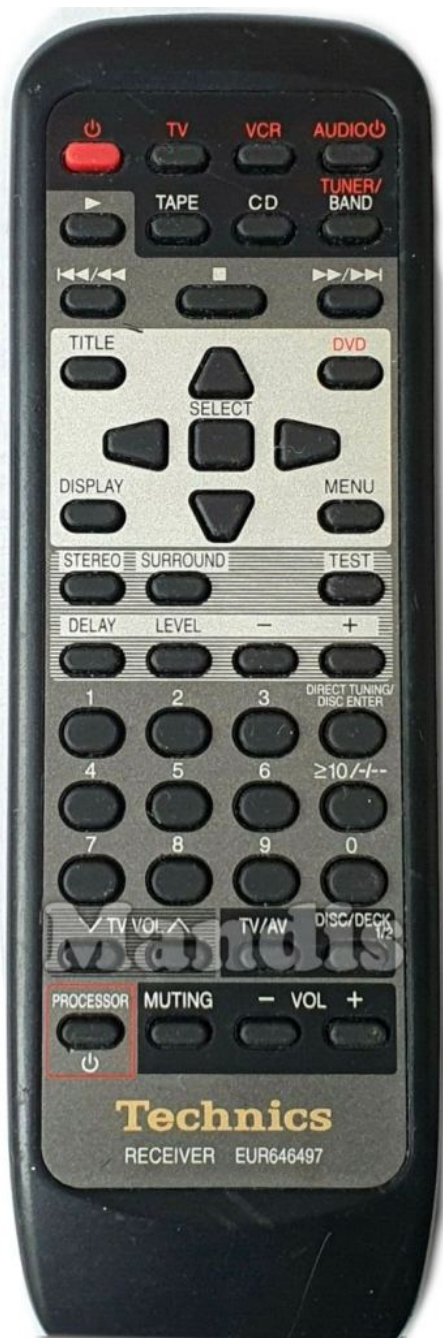 



 







 


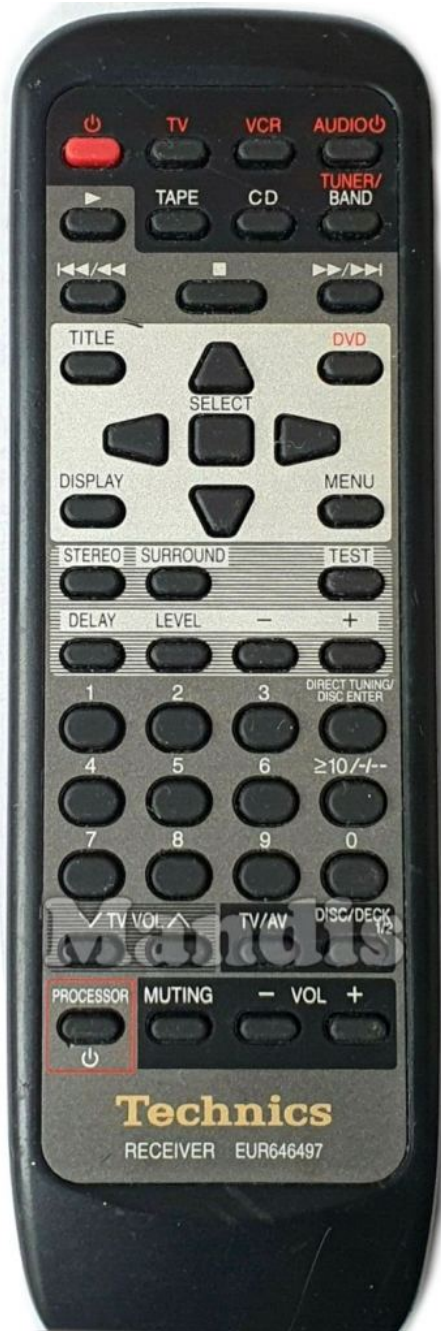
 



 



 



 









 





 




 






 



 












Originale	Sostituto
 Disc/Deck 1/2	 +  Shift + Menu
 1 CD-Tape	 1
 2 CD-Tape	 2
 3 CD-Tape	 3
 4 CD-Tape	 4
 5 CD-Tape	 5
 6 CD-Tape	 6
 7 CD-Tape	 7
 8 CD-Tape	 8
 9 CD-Tape	 9
 0 CD-Tape	 0
 >10/-- CD-Tape	 Guide
 Direct Tuning/Disc Enter	 List

Originale	Sostituto










Originale		Sostituto		Originale		Sostituto	
	Power VCR		Power		3 VCR		3
	Level		Media		4 VCR		4
	Delay		Options		5 VCR		5
	Surround		Subt		6 VCR		6
	Stereo		Dual		7 VCR		7
	VCR		Smart		8 VCR		8
	Tape		Red		9 VCR		9
	TV		TV/R		0 VCR		0
	CD		Yellow		>10/-/- VCR		Guide
	DVD		Blue		Direct Tuning/Disc Enter		List
	Tuner/Band		Green		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left





Originale	Sostituto
 Select	 Ok
 Disc/Deck 1/2	 Menu
 Display	 Info
 Menu	 D. Menu
 Test	 Text
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9

Originale	Sostituto
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

