

 





 


 

 
 


 
 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		[O]/Repeat		Pre Ch
	Goto		Smart		Input		AV
	Eject		Eject		EPG/?/A-B		Guide
	Setup		Options		Vol+		Vol +
	Title		List		Vol-		Vol -
	Mute		Mute		P+		Ch +
	1		1		P-		Ch -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Zoom		Shift + Eject
	8		8		Menu		Menu
	9		9		←		Back
	0/FAV		0		i		Info
	16:9 / Angle		Format		Red		Red





Originale		Sostituto		Originale		Sostituto	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play/Pause		Play				
	<<		<<				
	Stop		Stop				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	[...] / Double		Subt				
	Audio / Update		Dual				
	TXT		Text				

