



Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Play		Play / Slow		0		0
	Pause		Pause / Step / Freeze		Info		Info / Angle
	Stop		Stop / Hold		EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode		≡		Menu / Home
	<<		<< / Tune-		Source		AV / Input / RDS
	l<<		l<< / Preset-		Up		Up
	>>l		>>l / Preset+		Down		Down
	>>		>> / Tune+		Right		Right
	1		1		Left		Left
	2		2		OK		OK
	3		3		Exit		Exit / Cancel / Clear
	4		4		Smart		Smart / List
	5		5		←		Back / Return
	6		6		Vol+		Vol+
	7		7		P+		CH+ / Page+





Originale	Sostituto	Originale	Sostituto
[Vol-]	VOL [Vol-]		
[Home]	[SHIFT] + [HOME MENU] Shift + Menu /		
[P-]	[CH PAGE] CH- / Page-		
[NETFLIX]	[SHIFT] + [NETFLIX SEARCH] Shift + Red / Netflix /		
[YouTube]	[SHIFT] + [YouTube REPEAT A-B] Shift + Yellow / YouTube /		
[Red]	[NETFLIX SEARCH] Red / Netflix / Search		
[Green]	[APP REPEAT] Green / APP / Repeat		
[Yellow]	[YouTube REPEAT A-B] Yellow / YouTube / Repeat		
[Blue]	[Prime Video RANDOM] Blue / Prime Video / Random		
[O)/I]	[LANG I/II AUDIO] Audio / Lang I/II		
[≡]	[GOTO TEXT] Text / Goto		
[Subt.]	[EQ SUBTITLE] Subtitle / EQ		

Originale	Sostituto	Originale	Sostituto

