
















































 








| Originale                                                                                      | Sostituto                                                                                           |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|  Power        |  Power             |
|  DVD          |  Shift + 2         |
|  Open / Close |  Eject / Surround  |
|  1            |  1                 |
|  2            |  2                 |
|  3            |  3                 |
|  4            |  4                 |
|  5            |  5                 |
|  6            |  6                 |
|  7            |  7                 |
|  8           |  8                |
|  9          |  9               |
|  Return     |  Back / Return   |
|  0          |  0               |
|  Display    |  Display / Media |
|  Disc Menu  |  D.Menu / Top    |
|  Up         |  Up              |



































| Originale                                                                                        | Sostituto                                                                                                    |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  System Menu  |  Menu / Home              |
|  Left         |  Left                     |
|  OK           |  OK                       |
|  Right        |  Right                    |
|  I<<          |  I<< / Preset-            |
|  Down         |  Down                     |
|  >>I          |  >>I / Preset+            |
|  Stop         |  Stop / Hold              |
|  Play         |  Play / Slow              |
|  Pause / Step |  Pause / Step / Freeze    |
|  Marker      |  Fav / Marker / PC       |
|  Search     |  Red / Netflix / Search |
|  Subtitle   |  Subtitle / EQ          |
|  Audio      |  Audio / Lang I/II      |
|  Angle      |  Info / Angle           |
|  Zoom       |  Zoom / Size            |
|  Repeat     |  Green / APP / Repeat   |








 






























| Originale                                                                                       | Sostituto                                                                                           |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|  Power         |  Power             |
|  TV / VCR      |  TV/Radio /        |
|  VCR           |  Shift + 4         |
|  Eject         |  Eject / Surround  |
|  1             |  1                 |
|  2             |  2                 |
|  3             |  3                 |
|  4             |  4                 |
|  5             |  5                 |
|  6             |  6                 |
|  7            |  7                |
|  8           |  8               |
|  9           |  9               |
|  0           |  0               |
|  Display     |  Display / Media |
|  Up          |  Up              |
|  System Menu |  Menu / Home     |

| Originale                                                                                        | Sostituto                                                                                                        |
|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|  Left         |  Left                         |
|  OK           |  OK                           |
|  Right        |  Right                        |
|  I<<          |  I<< / Preset-                |
|  Down         |  Down                         |
|  >>I          |  >>I / Preset+                |
|  Stop         |  Stop / Hold                  |
|  Play         |  Play / Slow                  |
|  Pause / Step |  Pause / Step / Freeze        |
|  Marker       |  Fav / Marker / PC            |
|  Search      |  Red / Netflix / Search      |
|  Input      |  AV / Input / RDS           |
|  Rec / ITR  |  Rec / Rec Mode             |
|  Program    |  Shift + TV/Radio / Program |
|  Clear      |  Exit / Cancel / Clear      |
|  LP         |  Setup / OPT /              |
|  C.Lock     |  Back / Return              |



