

















































 







Originale	Sostituto
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up








Originale	Sostituto
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat





Originale

Sostituto



































	Repeat A-B		Yellow / YouTube / Repeat
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Title		Sound / Title
	Shuffle		Blue / Prime Video / Random









 

























Originale

Sostituto





Originale	Sostituto
 Power	 Power
 TV / VCR	 TV/Radio /
 VCR	 Shift + 4
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Display / Media
 Up	 Up
 System Menu	 Menu / Home

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Input	 AV / Input / RDS
 Rec / ITR	 Rec / Rec Mode
 Program	 Shift + TV/Radio / Program
 Clear	 Exit / Cancel / Clear
 LP	 Setup / OPT /
 C.Lock	 Back / Return





Originale	Sostituto	Originale	Sostituto
SHOW VIEW VIDEO PLUS	Show View / Video Plus		
	LIST SMART		
	Smart / List		

