



Originale		Sostituto		Originale		Sostituto	
	Power		Power		<<		<<
	1		1		>>		>>
	2		2		<<		<<
	Eject/Open-Close		Eject		Stop		Stop
	VCR		Smart		Play		Play
	DVD		Media		Pause/Step		Pause
	3		3		Disc Menu/List		Menu
	4		4		Home	+	Shift + Smart
	5		5		Display		Info
	6		6		Return		Back
	7		7		Enter		Ok
	8		8		Up		Up
	9		9		PR/CH/TRK+		Ch +
	0		0		PR/CH/TRK-		Ch -
	Clear		Exit		Down		Down
	AV/Input		AV		Right		Right
	>>		>>		Left		Left



