


 

 








 























Originale	Sostituto
	Mute / Dimmer
	Power
	Audio / Lang I/II
	TV/Radio /
	Sound / Title
	Picture / Format
	Text / Goto
	Shift + Stop /
	Shift + Zoom /
	Back / Return
	Sleep / Timer
	1
	2
	3
	Info / Angle
	4
	5

Originale	Sostituto
	6
	Shift + Yellow / YouTube /
	7
	8
	9
	AV / Input / RDS
	Guide / EPG / -/--
	0
	Exit / Cancel / Clear
	D.Menu / Top
	Fav / Marker / PC
	Setup / OPT /
	Shift + Fav / Marker / PC
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-























Originale	Sostituto
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Left
	 Right
	 Zoom / Size
	 Menu / Home
	 Smart / List
	 OK
	 Up
	 Subtitle / EQ
	 >>I / Preset+
	 Shift + Right
	 Down
	 Shift + CH+ /

Originale	Sostituto
	 I<< / Preset-
	 Shift + Left
	 Shift + Power
	 Shift + CH- /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze























Originale		Sostituto		Originale		Sostituto	
	Power Down		Power				
	Prog+ Down		CH+ / Page+				
	Prog- Down		CH- / Page-				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	>>		>> / Tune+				
	Play		Play / Slow				
	<<		<< / Tune-				





Originale		Sostituto		Originale		Sostituto	
	Power Down		Power				
	Prog+ Down		CH+ / Page+				
	Prog- Down		CH- / Page-				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	>>		>> / Tune+				
	Play		Play / Slow				
	<<		<< / Tune-				





Originale	Sostituto
Power Down	Power
Prog+ Down	CH+ / Page+
Prog- Down	CH- / Page-
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

Originale	Sostituto

