









 


 





 


 


 

 

 

 


 

 





Originale		Sostituto		Originale		Sostituto	
	On		Power		Muting		Mute / Dimmer
	Standby		Shift + Power		Level Down		CH- / Page-
	Sleep		Sleep / Timer		Level Up		CH+ / Page+
	Return		Back / Return		I<<		I<< / Preset-
	Setup		Setup / OPT /		Play		Play / Slow
	Disc+		Shift + CH+ /		>>I		>>I / Preset+
	Up		Up		<<		<< / Tune-
	Vol+		Vol+		Stop		Stop / Hold
	Disc-		Shift + CH- /		>>		>> / Tune+
	Left		Left		Rec / Random		Rec / Rec Mode
	Enter		OK		Pause / Play Rev.		Pause / Step / Freeze
	Right		Right		Open / Close		Shift + Eject / Surround
	Vol-		Vol-		Input Sel. DVD		2
	Down		Down		Input Sel. CD		3
	Audio		Audio / Lang I/II		Input Sel. V1		1
	CH Sel		Smart / List		Input Sel. V2		4
	Test		Text / Goto		Input Sel. T1		5





	Originale	Sostituto	
	Input Sel. T2	 8	8
	Input Sel. V3	 7	7
	Input Sel. V4	 9	9
	Input Sel. TUN	 6	6
	Input Sel. PH	 0	0
	Stereo	 SOUND	Sound / Title
	Direct	 NETFLIX SEARCH	Red / Netflix / Search
	DSP 	 + 	Shift + Right
	SURR	 SURROUND	Eject / Surround
	A.ST	 APP REPEAT	Green / APP / Repeat
	 DSP	 + 	Shift + Left
	SP A	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	SP B	 Prime Video RANDOM	Blue / Prime Video / Random
	Re-EQ	 EQ SUBTITLE	Subtitle / EQ
	Display	 MEDIA DISPLAY	Display / Media
	Dimmer	 + 	Shift + Mute / Dimmer
	Zone 2	 RDS AV INPUT	AV / Input / RDS

Originale	Sostituto





Originale	Sostituto
ON	Power
STDBY	Shift + Power
Return	Back / Return
Setup	Setup / OPT /
Disc+	CH+ / Page+
Up	Up
Vol+	Vol+
Disc-	CH- / Page-
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Top Menu	D.Menu / Top
Menu	Menu / Home
Muting	Mute / Dimmer
Angle	Info / Angle

Originale	Sostituto
Subtitle	Subtitle / EQ
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7




 





Originale		Sostituto	
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Search		Red / Netflix / Search

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		CH+ / Page+		5		5
	Vol+		Vol+		6		6
	Vol-		Vol-		7		7
	Muting		Mute / Dimmer		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Open / Close		Eject / Surround				
	1		1				
	2		2				





Originale	Sostituto
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0

