 

 

 
 
 
 

 







 









 
 

 
 

 
 

 
 

 



 
 








 



 

 
 





 





Originale	Sostituto
 Power	 Power
 Tv/Input	 AV
 Wide	 Format
 A-B	 Smart
 [-]/[Y]/[≡?]	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-/[≡0]	 Guide
 CS	 Options

Originale	Sostituto
 Menu/[≡i]	 Menu
 P↔P	 Pre Ch
 →↔←	 TV/R
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 F/OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Red/Surround	 Red
 Green	 Green
 Yellow/Bass	 Yellow
 Blue/Timer	 Blue



