
 

 

 





















 






 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Index	 List
 SD	 Smart	 Hold	 Options
 [+]	 Info	 N	 Media
 Tv/AV	 AV	 CH+	 Ch +
 Menu	 Menu	 CH-	 Ch -
 Exit	 Exit	 Vol+	 Vol +
 Up	 Up	 Vol-	 Vol -
 Down	 Down	 Mute	 Mute
 Right	 Right	 1	 1
 Left	 Left	 2	 2
 OK	 Ok	 3	 3
 Red	 Red	 4	 4
 Green	 Green	 5	 5
 Yellow	 Yellow	 6	 6
 Blue	 Blue	 7	 7
 Tv/Text	 Text	 8	 8
 F.P.	 Eject	 9	 9

Originale	Sostituto	Originale	Sostituto
 Index	 List	 Disc Nav	 Options
 Hold	 Media	 CH+	 Ch +
 CH-	 Ch -	 Vol+	 Vol +
 Vol-	 Vol -	 Mute	 Mute
 1	 1	 2	 2
 3	 3	 4	 4
 5	 5	 6	 6
 7	 7	 8	 8
 8	 8	 9	 9



