


 





 



 

 

 

 





 









 



 



 




 
 

 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PP	 Back
 List / Menu	 Menu
 ? / Picture	 Format
 Mute	 Mute
 i / Display	 Info
 Up / P+	 Up

Originale	Sostituto
 Down / P-	 Down
 Right / V+	 Right
 Left / V-	 Left
 OK	 Ok
 Up / P+	 Ch +
 Down / P-	 Ch -
 Right / V+	 Vol +
 Left / V-	 Vol -
 EPG	 Guide
 TVTV	 TV/R
 Exit	 Exit
 Red / <<	 Red
 Green / Stop	 Green
 Yellow / I>	 Yellow
 Blue / >> / VT	 Blue
 Rec	 Rec
 Jump / Source	 Smart





Originale		Sostituto	
 Jump / Source		 AV	AV
 Live / MC		 MEDIA	Media
 Radio / Audio		 SHIFT + TV/R	Shift + TV/R
 F1 / PIP		 SHIFT + 1	Shift + 1
 F2 / Zoom		 SHIFT + 2	Shift + 2
 F2 / Zoom		 ZOOM	Eject
 F3 / Positioning		 SHIFT + 3	Shift + 3
 F4 / Moving		 SHIFT + 4	Shift + 4

Originale		Sostituto	

