


























 

 

 

 









Originale	Sostituto
 Power	 Power
 Control	 Setup / OPT /
 [i+]	 Info / Angle
 P.Info	 Smart / List
 ATV	 Shift + Smart / List
 DTV	 Shift + Display / Media
 SAT	 Shift + 0
 Radio	 TV/Radio /
 Power Ext. Media	 Shift + Power
 ←	 Shift + Left
 Pause	 Pause / Step / Freeze
 →	 Shift + Right
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec Stop	 Shift + Stop / Hold

Hold

Originale	Sostituto
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Fav / Marker / PC
 0	 0
 Source	 AV / Input / RDS
 I/II/I+II/▼/O	 Audio / Lang I/II
 [<>]	 Picture / Format





Originale	Sostituto
AV Mode	Shift + AV / Input / RDS
Eco	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
P+	CH+ / Page+
[=]	Text / Goto
Vol-	Vol-
P-	CH- / Page-
Home	Menu / Home
EPG	Guide / EPG / -/--
Nothing	Eject / Surround
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down

Originale	Sostituto
Back	Back / Return
[...]	Subtitle / EQ
[=/?]	D.Menu / Top
[=o]	Sleep / Timer
[=◇]	Zoom / Size
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

