



Originale	Sostituto
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Dimmer	Shift + Mute / Dimmer
Input Selector Multi CH	8
Return	Back / Return
Setup	Setup / OPT /
Enter	OK
Input Selector	2
Input Selector	5
Sleep	Sleep / Timer
Input Selector Tuner	6
SP A/B	Audio / Lang I/II
Muting	Mute / Dimmer
Up	Up
Down	Down

Originale	Sostituto
Right	Right
Input Selector CD	3
Left	Left
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
Play Rev.	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Display	Display / Media
Listening Mode Stereo	Sound / Title
Listening Mode Surround	Eject / Surround
Listening Mode <	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Text / Goto
Level-	CH- / Page-





Originale	Sostituto
Vol+	Vol+
CH Sel	Smart / List
Level+	CH+ / Page+
L.Night	TV/Radio /
Cine FLTR	D.Menu / Top
Vol-	Vol-
Input Tv	Shift + AV / Input / RDS
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
CH/Disc/Album	Shift + CH+ /
CH/Disc/Album-	Shift + CH- /
1 Tv	Shift + 1
2 Tv	Shift + 2
Power Tv/Standby	Shift + Power
3 Tv	Shift + 3
4 Tv	Shift + 4
6 Tv	Shift + 6

Originale	Sostituto
5 Tv	Shift + 5
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Enter Tv	Shift + OK
Right Tv	Shift + Right
Previous Menu Tv	Shift + Fav / Marker / PC
Left Tv	Shift + Left
Setup Tv	Shift + Setup / OPT / Tools
Up Tv	Shift + Up
Down Tv	Shift + Down





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
VCR	Shift + 4
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Originale	Sostituto
Previous Menu/Muting	Mute / Dimmer
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
I>> / Preset+	I>> / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-










	Originale	Sostituto		Originale	Sostituto
	Listening Mode >	 +  Shift + >>  / Preset+			
	Audio	 AUDIO Audio / Lang I/II			
	Subtitle	 EQ Subtitle / EQ			
	Random	 Blue / Prime Video / Random			
	Repeat	 Green / APP / Repeat			
	Display	 Display / Media			
	Play Mode VCR	 Picture / Format			
	DVD	 +  2 Shift + 2			
	HDD	 +  7 Shift + 7			





Originale		Sostituto		Originale		Sostituto	
	On / Standby		Power		Pause		Pause / Step / Freeze
	1		1		Play		Play / Slow
	2		2		Stop		Stop / Hold
	3		3		<<		<< / Tune-
	4		4		>>		>> / Tune+
	5		5		I<<		I<< / Preset-
	6		6		>>I		>>I / Preset+
	7		7		Stereo		Audio / Lang I/II
	8		8		Surround		Eject / Surround
	9		9		< Listening Mode		Shift + I<< / Preset-
	+10/10/-/-		Guide / EPG / -/-		Listening Mode >		Shift + >>I / Preset+
	0/11		0		Random		Blue / Prime Video / Random
	12		Fav / Marker / PC		Repeat		Green / APP / Repeat
	Disc+		CH+ / Page+		Display		Display / Media
	Vol+		Vol+				
	Disc-		CH- / Page-				
	Vol-		Vol-				





Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/10/-/-		Guide / EPG / -/-
	0/11		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold

Originale		Sostituto	
	<<		<< / Tune-
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	< Listening Mode		Shift + I<< / Preset-
	Listening Mode >		Shift + >>I / Preset+
	Play Mode		D.Menu / Top
	L.Night		Sleep / Timer

