



 

 

 
 
 
 
 
 
 
 




 

 



 



 

 



 





Originale	Sostituto
	Mute / Dimmer
	Power
	TV/Radio /
	Shift + 2
	Shift + TV/Radio / Program
	Shift + Rec / Rec Mode
	Shift + Yellow / YouTube /
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
	0
	Guide / EPG / -/-
	Smart / List
	Picture / Format
	Text / Goto
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Vol+
	Up
	CH+ / Page+
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-




 
 

 

 

 
 
 

 

 

 


Originale	Sostituto	Originale	Sostituto
 C-SET	 Red / Netflix / Search		
 SV	 Green / APP / Repeat		
 ZOOM	 Yellow / YouTube / Repeat		
 MARKER	 Blue / Prime Video / Random		
			
	 Play / Slow		
			
	 Rec / Rec Mode		
	 Shift + Stop /		
	 Pause / Step / Freeze		
	 Stop / Hold		





 

 



 



 

 

 







Originale	Sostituto
	Mute / Dimmer
	Power
	TV/Radio /
	Shift + 2
	Shift + TV/Radio / Program
	Shift + Rec / Rec Mode
	Shift + Yellow / YouTube /
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
	0
	Guide / EPG / -/-
	Smart / List
	Picture / Format
	Text / Goto
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Vol+
	Up
	CH+ / Page+
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-




 


 
 
 

 

 

 

 





















Originale	Sostituto	Originale	Sostituto
 C-SET	 Red / Netflix / Search		
 Green/SV	 Green / APP / Repeat		
 Yellow/Zoom	 Yellow / YouTube / Repeat		
 Blue/Marker	 Blue / Prime Video / Random		
	 << / Tune-		
	 Play / Slow		
	 >> / Tune+		
	 Shift + Stop /		
	 Rec / Rec Mode		
	 Pause / Step / Freeze		
	 Stop / Hold		



 

 









 





 





Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Picture / Format
	 TV/Radio /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Originale	Sostituto
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9















 


















Originale		Sostituto		Originale	Sostituto
	EPG/DVD-AV		Guide / EPG / -/--		
	0/AV		0		
	Red/C-Set		Red / Netflix / Search		
	Green/SV		Green / APP / Repeat		
	Yellow/Zoom		Yellow / YouTube / Repeat		
	Blue/Marker		Blue / Prime Video / Random		
	Rec		Shift + Stop /		
	Rec Menu		Shift + Rec / Rec Mode		
	Radio		Shift + TV/Radio / Program		
	DVD		Shift + 2		
	- []- / ← AB		Shift + Yellow / YouTube /		





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute / Dimmer	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
Audio		Audio / Lang I/II	
PIP		Picture / Format	
TV		TV/Radio /	
Text/Disc-M		Text / Goto	
Menu		Menu / Home	
Up		Up	
Info		Info / Angle	
Left		Left	
OK		OK	

Originale	Sostituto	Originale	Sostituto
Right		Right	
End		Exit / Cancel / Clear	
Down		Down	
Vol+		Vol+	
Assist/Card		Smart / List	
P+		CH+ / Page+	
Vol-		Vol-	
P-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	





Originale	Sostituto
EPG/DVD-AV	Guide / EPG / -/--
0/AV	0
Red/C-Set	Red / Netflix / Search
Green/SV	Green / APP / Repeat
Yellow/Zoom	Yellow / YouTube / Repeat
Blue/Marker	Blue / Prime Video / Random
Rec	+ Shift + Stop /
Rec Menu	+ Shift + Rec / Rec Mode
Radio	+ Shift + TV/Radio / Program
DVD	+ Shift + 2
- [] / ← AB	+ Shift + Yellow / YouTube /

Originale	Sostituto

