



Originale	Sostituto
Power	Power
Power TV	+ Shift + Power
Tv Vol+	Vol+
AV Input TV	AV / Input / RDS
Tv Vol-	Vol-
1	1
2	2
3	3
Open / Close	Eject / Surround
4	4
5	5
6	6
PIP	Picture / Format
7	7
8	8
9	9
Secondary	Sound / Title

Originale	Sostituto
Cancel	+ Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top
Up	Up
Home	Menu / Home



Audio



	Originale	Sostituto	Originale	Sostituto
	Left			
	OK			
	Right / II>			
	Option			
	Down			
	Return			
	Red			
	Green			
	Yellow			
	Blue			

